

Christmas Window Candle

Enclosed in this box

- 4 – Candles
- 6 – C26 7 Watt steady burn clear bulbs (Included 2 Replacement Bulbs)

1. Carefully unpack candles from the protective outer packaging and remove the inner packaging surrounding the candles.
2. Replacement bulbs are packed separately in the bubble bag and typed on the inner packaging (Foam).
3. Place the plug into any convenient standard outlet or UL approved indoor extension cord.
4. Timer is set when candle is turned on. Candle will stay lit for 8 hours, turn off, and turn back on at the same time every day.
5. To reset daily timer, unplug the candle and plug the candle back into outlet at desired start time.

Care:

1. Always unplug the candle before changing a bulb or fuse.
2. Make sure the bulb is fully screwed in (bulb will light even if not fully screwed in)
3. To replace broken or non functioning bulb unscrew bulb and replace with a C26, 7 Watt steady burn bulb (our replacement).
4. Each candle plug is equipped with a replaceable 125V 5A max. fuse.
5. Clean with damp cloth and non abrasive detergent or window cleaner.



Indoor Use Only

Made in China