

# IR Multi Function Window Candle

## Enclosed in this box

3 - Candles

1 - Remoter


5 – C26 7 Watt steady burn clear bulbs (Included 2 Replacement Bulbs)

1. Carefully unpack candles from the protective outer packaging and remove the inner packaging surrounding the candles.
2. Replacement bulbs are packed separately in the bubble bag and typed on the inner packaging (Foam).
3. Place the plug into any convenient standard outlet or UL approved indoor extension cord.
4. The functions of remoter as below:  
OFF: Turn the candle OFF  
ON: Keep candle ON for Steady 24 hrs a day  
6: Set up the timer for 6 hrs ON and 18 hrs OFF every day at the same time  
8: Set up the timer for 8 hrs ON and 16 hrs OFF every day at the same time  
12: Set up the timer for 12 hrs ON and 12 hrs OFF every day at the same time  
“-”: Dimmer the bulb  
“+”: Brighter the bulb

**Note: Using Remoter under 10 feet. Need to replace the battery if need to closer to control the candle**

## Care:

1. Always unplug the candle before changing a bulb or fuse.
2. Make sure the bulb is fully screwed in (bulb will light even if not fully screwed in)
3. To replace broken or non functioning bulb unscrew bulb and replace with a C26, 7 Watt steady burn bulb (our replacement).
4. Each candle plug is equipped with a replaceable 125V 5A max. fuse.
5. Clean with damp cloth and non abrasive detergent or window cleaner.
6. It will be “ON” function after plug in the candle and without push any remote bottom
7. The - / + function does not support the LED bulb

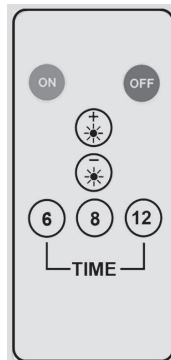

**Indoor Use Only**