


LED Window Candle with Multi Functions

Enclosed in this box

- 1 - Candle
- 1 - Remoter
- 1 - 4.5V Simulation LED Candle Flame

1. Carefully unpack candles from the protective outer packaging and remove the inner packaging surrounding the candles.
2. Unscrew LED bulb
3. Insert 3 x AA batteries (+ Side up) in taper.
 - a. Do not mixed battery types or brands
 - b. Do not mix old and new batteries
4. Screw LED bulb on the top of taper. Candle will turn ON once the bulb is screwed in. (Steady for 24 hrs)
5. Pull the plastic tab out before using the remoter
6. The functions of remoter as below:
OFF: Turn the candle OFF
ON: Keep candle ON for 24 hrs a day
6: Set up the timer for 6 hrs ON and 18 hrs OFF. Every day at the same time
8: Set up the timer for 8 hrs ON and 16 hrs OFF. Every day at the same time
12: Set up the timer for 12 hrs ON and 12 hrs OFF. Every day at the same time
“Tw”: Switch LED bulb to Twinkle function
“St”: Switch LED bulb to Steady function

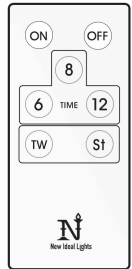

Note: Using Remoter under 10 feet. Need to replace the battery if need to closer to control the candle

Care:

1. Always remove batteries when not using.
2. Replace batteries when candle dims.
3. Dispose of used batteries responsibly.
4. Clean with damp cloth and non abrasive detergent or window cleaner.
5. It will be “ON” function after insert 3 x AA batteries (+ Side up) and without push any remote bottom

If you need any help or question, please let us know.



new-ideal-lights.com



Indoor Use Only Made in China