

LED Window Candle with Multi Functions

Enclosed in this box

- 3 - Candles
- 1 - Remoter
- 3 - 4.5V Simulation LED Candle Flame

- Carefully unpack candles from the protective outer packaging and remove the inner packaging surrounding the candles.
- Unscrew LED bulb
- Insert 3 x AA batteries (+ Side up) in taper.
 - Do not mixed battery types or brands
 - Do not mix old and new batteries
- Screw LED bulb on the top of taper. Candle will turn ON once the bulb is screwed in. (Steady for 24 hrs)
- Pull the plastic tab out before using the remoter
- The functions of remoter as below:

OFF: Turn the candle OFF

ON: Keep candle ON for 24 hrs a day

6: Set up the timer for 6 hrs ON and 18 hrs OFF. Every day at the same time

8: Set up the timer for 8 hrs ON and 16 hrs OFF. Every day at the same time

12: Set up the timer for 12 hrs ON and 12 hrs OFF. Every day at the same time

“Tw“: Switch LED bulb to Twinkle function

“St” : Switch LED bulb to Steady function

Note: Using Remoter under 10 feet. Need to replace the battery if need to closer to control the candle

Care:

- Always remove batteries when not using.
- Replace batteries when candle dims.
- Dispose of used batteries responsibly.
- Clean with damp cloth and non abrasive detergent or window cleaner.
- It will be “ON” function after insert 3 x AA batteries (+ Side up) and without push any remote bottom



If you need any help or question, please let us know.



new-ideal-lights.com

